



MANUAL

HTC 650 HDX

Translation of manual in original language





Contact Information

HTC Sweden AB
Box 69
SE-614 22 Söderköping - Sweden
Tel: +46 (0) 121-294 00
Fax: +46 (0) 121-152 12

You can find addresses for our retailers and service partners on our website:

www.htc-floorsystems.com

Always specify the model and serial number when asking questions about your product.

Trademarks

HTC is a trademark owned by HTC Sweden AB. Other names and products mentioned in this manual may be registered trademarks owned by the relevant companies.

© 2007 HTC Sweden AB. All rights reserved.

EC Declaration of conformity

Manufacturer:	HTC Sweden AB Box 69 SE-614 22 Söderköping Sweden +46 (0)121-29400
Type of equipment:	Grinding machine
Make:	HTC
Model:	HTC 650 HDX
Year of manufacture:	See machine name plate
Serial number:	See machine name plate

As the manufacturer, we hereby declare under our sole responsibility that the above product with serial numbers from 2004 onward conforms to the applicable regulations in directives MD 2006/42/EC, EMC 2004/108/EC and LVD 2006/95/EC. The following standards have been used as a basis: ISO 5349-1:2001, ISO 5349-2:2001, ISO 20643:2005, ISO 3741.

This product was CE-marked in 2005. The technical documentation is available from the manufacturer.

Original of the EC declaration of conformity (Swedish). Other languages are translations of the original of the EC declaration of conformity.

Söderköping, 01-01-2010



Peter Lundgren
Development Manager,
HTC Sweden AB



Kåre Kilgren
Product Manager,
HTC Sweden AB

Table of contents

1. Introduction.....	1
1.1 General information.....	1
1.2 Responsibility.....	1
1.3 Manual.....	1
1.3.1 Safety instructions – Explanation of symbols.....	1
1.4 Transportation.....	2
1.5 On delivery.....	3
1.6 Unpacking the machine.....	3
1.7 Machine name plate.....	4
1.8 Handling and storage.....	4
1.9 Vibration and noise.....	5
1.9.1 Hand and arm vibrations.....	5
1.9.2 Sound pressure level.....	5
2. Safety.....	6
2.1 General Information.....	6
2.2 Warnings.....	6
2.3 Notes.....	7
3. Machine Description.....	9
3.1 General machine description.....	9
3.2 Description of Controls – Control Panel.....	12
4. Usage.....	14
4.1 General Information.....	14
4.2 Handle settings.....	16
4.3 Handling weights.....	17
4.4 Access to grinding tools.....	19
4.5 Fitting and replacing grinding tools.....	21
4.5.1 Fitting grinding tools.....	21
4.5.2 Changing grinding tools.....	22
4.6 Preparations for dry grinding.....	23
4.7 Preparations for wet grinding.....	23
4.8 Operation.....	24
4.8.1 Standby.....	24
4.8.2 Emergency stop switch.....	24
4.8.3 Starting the machine.....	25
4.8.4 Overload.....	25
4.9 Making operation easier.....	26

5. Maintenance and repairs.....	27
5.1 General Information.....	27
5.2 Cleaning.....	27
5.3 Daily.....	27
5.4 Every week.....	27
5.5 Every month (or 100 hours).....	28
5.6 Repairs.....	28
5.7 Spare parts.....	28
 6. Faultfinding.....	 30
6.1 General Information.....	30
6.1.1 The machine will not start.....	30
6.1.2 The machine vibrates or wears the tool unevenly.....	30
6.1.3 The machine is grinding at an angle.....	30
6.1.4 The machine stops during operation.....	30
6.1.5 The fuses trip frequently.....	31
6.1.6 The machine cannot cope.....	31
 7. Electronic error codes.....	 32
7.1 General.....	32
7.2 Hitachi SJ700.....	32
7.2.1 Resetting the frequency converter.....	33
7.2.2 Checking the last error code.....	33
7.3 Omron MX2.....	33
7.3.1 Resetting the frequency converter.....	34
7.3.2 Checking the last error code.....	34
 8. Technical Data.....	 36
 9. Environment.....	 38
 10. Warranty and CE Marking.....	 39
10.1 Warranty	39
10.2 CE marking.....	39

1. Introduction

1.1. General information

HTC 650 HDX is a grinder that can be used to grind, strip, clean and polish concrete, natural stone and terrazzo floors. The machine's area of application depends on the choice of tool.

Read the manual carefully so that you are totally familiar with the machine before you start using it. Contact your local retailer for further information. For contact information, see Contact Information at the start of the manual.

1.2. Responsibility

Even though every effort has been made to make this manual as complete and accurate as possible, we bear no responsibility for incorrect or missing information. HTC reserves the right to change descriptions in this manual without giving prior notice.

This manual is protected by the Copyright Act and no part of it may be copied or used in any other way without the written approval of HTC.

1.3. Manual

In addition to the general functions, this manual deals with the areas of application and the maintenance of the grinder.

1.3.1. Safety instructions – Explanation of symbols

A number of symbols are used in the manual to highlight the most important sections, see below. In order to avoid both personal injury and material damage as far as possible, it is extremely important to read and understand the text next to these symbols particularly carefully. There are other symbols indicating practical tips. These are to help you use the machine in the easiest and most effective way.

The following symbols are used in the document to indicate where special attention is needed.



The symbol indicates a **Warning!** and means that incorrect use can result in personal injury or material damage to the machine or accessories. If you see this symbol next to a section of text, you must be particularly careful when reading through the text and not carry out any stages of which you are unsure. This is to protect you and other users and to avoid damaging the machine or other equipment.



The symbol means **Note!** and indicates that material damage can occur if the machine or its accessories are used incorrectly. If you see this symbol next to a section of text, you must be particularly careful when reading through the text and not carry out any stages of which you are unsure. This is to avoid damage to the machine or other equipment.



The symbol indicates a **Tip!** and indicates that you can get tips and advice on ways to make operating your machine or associated equipment easier, and to avoid wear. When you see this symbol you should read the accompanying text to facilitate your work and increase the service life of the machine.

1.4. Transportation

The appropriate way to transport the machine is to firmly anchor it to a pallet.

The machine can also be transported by lifting equipment, for example truck or crane, using the lifting eyes provided. In which case, make sure that the weights are locked in the forward position and that the handle is in its back position, see Figure 4-3 on page 18 and Figure 4-2 on page 17.

1.5. On delivery

The following items are included in the delivery. Contact your retailer if anything is missing.

- Grinding machine
- Manual
- Locking key for control cabinet
- Hammer EZ system
- Splash guard

1.6. Unpacking the machine



Warning!

Read through the safety instructions and the manual carefully before use.

- Check carefully to see if the packaging or machine has been damaged during delivery. If there is any sign of damage, contact your retailer and report it. Report packaging damage to the transport company as well.
- Check that the delivery matches the order. If there are any discrepancies, contact your retailer.

1.7. Machine name plate

The machine name plate provides the following information. The model and serial number must be specified when ordering spare parts for the machine.

	1	
	2	
	3	
	4	
	5	8
	6	9
	7	10
11		Made in Sweden

Figure 1-1 Machine name plate

1. Model
2. Model number
3. Serial number
4. Year of manufacture
5. Kilowatt (kW)
6. Voltage (V)
7. Ampere (A)
8. Hertz (Hz)
9. Revolutions per minute (r.p.m.)
10. Weight (kg)
11. Address field

1.8. Handling and storage

The machine should be stored in a dry, warm location when not in use. Otherwise it may become damaged by condensation and coldness.

1.9. Vibration and noise



Warning!

Always use hearing protection when using the machine.

1.9.1. Hand and arm vibrations

Hand and arm-weighted vibration level [m/s^2] for HTC 650 HDX have been measured using equipment approved in accordance with ISO 5349-1:2001. Measurement uncertainty for the measurement equipment has been assessed as $\pm 2\%$.

The machine has been tested in accordance with ISO 5349-2:2001 and ISO 20643:2005 in order to identify the operations that contribute to the most frequent vibration exposures. At vibration levels $> 2.5 \text{ m/s}^2$, the exposure time should be limited in accordance with the table below. For vibration levels $> 5 \text{ m/s}^2$, immediate measures should be taken by the employer to ensure that the exposure time does not exceed the time specified in the table below.

Identified work conditions	Measured values [m/s^2]	Daily permitted exposure (number of hours)
Grinding/polishing	5.45	6.74
Floor preparation (T-rex)	5.49	6.63

1.9.2. Sound pressure level

This machine has been tested for noise in accordance with ISO 3741. For information on sound pressure levels, see the table in chapter Technical Data on page 36.

2. Safety

2.1. General Information

This chapter contains all the warnings and notes that have to be considered for HTC 650 HDX.

2.2. Warnings



Warning!

The machine may only be used or repaired by personnel who have received the requisite theoretical and practical training and who have read the user manual.



Warning!

Never use the machine in an environment with a risk of explosion or fire. Familiarise yourself with the fire-protection instructions for the working area and follow them.



Warning!

Secure the area around the working area. No unauthorised persons should be allowed within a 15-metre radius of the machine. If a loose object were to catch under the grinding head, this could be flung out and cause personal injury.



Warning!

Use protective equipment such as safety shoes, safety goggles, protective gloves, breathing mask and ear muffs.



Warning!

The machine must only be started with the grinding head down. The rotating disc must be touching the floor and the correct tool must be fitted.



Warning!

The tool becomes very hot during use. Tip the machine back and allow it to stand for a short while. Use protective gloves when removing the tools.



Warning!

Disconnect the electrical supply when changing tools or repairing the machine.



Warning!

The machine must only be used and moved on level surfaces. There is a risk of crushing if the machine starts to roll.



Warning!

Connect the machine to an earth fault breaker.



Warning!

The machine may only be used when the splash guard is fitted.

2.3. Notes



Note!

The machine may only be used to grind and polish natural stone, terrazzo, concrete, or other materials stated in this manual or that are approved by HTC.



Note!

Only original tools and spare parts from HTC may be used for the machine. Otherwise neither the CE marking nor the warranty will be valid.

**Note!**

For the CE marking to be valid, the instructions in this manual must be followed.

**Note!**

The machine must only be lifted using the lifting eye intended for the purpose in accordance with the relevant instructions.

**Note!**

The machine should be stored in a dry, warm (plus degrees) location when not in use.

**Note!**

If the machine is stored in a cold (minus degrees) location, it must be placed in a warm (plus degrees) location for at least two hours before use.

**Note!**

The appropriated dust extractor must be used when dry grinding. Contact HTC for model recommendation.

**Note!**

After removing glue and wet grinding, always lift up the grinding heads so that they do not stick to the floor and damage machine components and the floor when restarting.

**Note!**

When wet grinding, the water tank must be filled with water. Only cold water with no chemical additives may be used.

3. Machine Description

3.1. General machine description

HTC 650 HDX is designed for grinding in both large and small spaces. It is used to grind, coarse grind, prepare and polish concrete, natural stone and terrazzo floors or other materials specified in this manual or material recommended by HTC. The machine is a perfect choice for removing coverings and for grinding concrete floors, according to the HTC Superfloor method, which is an environmentally-friendly method for grinding and polishing concrete floors.

The machine is constructed from a number of main components, see Figure 3-1 on page 10 and Figure 3-2 on page 11. As it is equipped with four grinding discs, this means that it is balanced and easy to handle. It also provides more effective stripping with better grinding results. It also has an integrated weight system for adjusting the grinding pressure, which makes the machine perfect for those with high demands for versatility.

The handle can be set at several different angles, select a position that suits you best.

The grinding cover has a connection for an external suction hose, which is used during dry grinding.

The machine can be easily equipped with a large number of tools, depending on the material to be ground. For the different tools, see HTC's Product Catalogue, from the Grinding Guide tab.

HTC 650 HDX can be equipped with a Mist Cooler system for effective cooling of the grinding tools. This system enables a very fine water mist to be spread through a nozzle onto the floor surface, which cools the tools, making the grinding more effective.

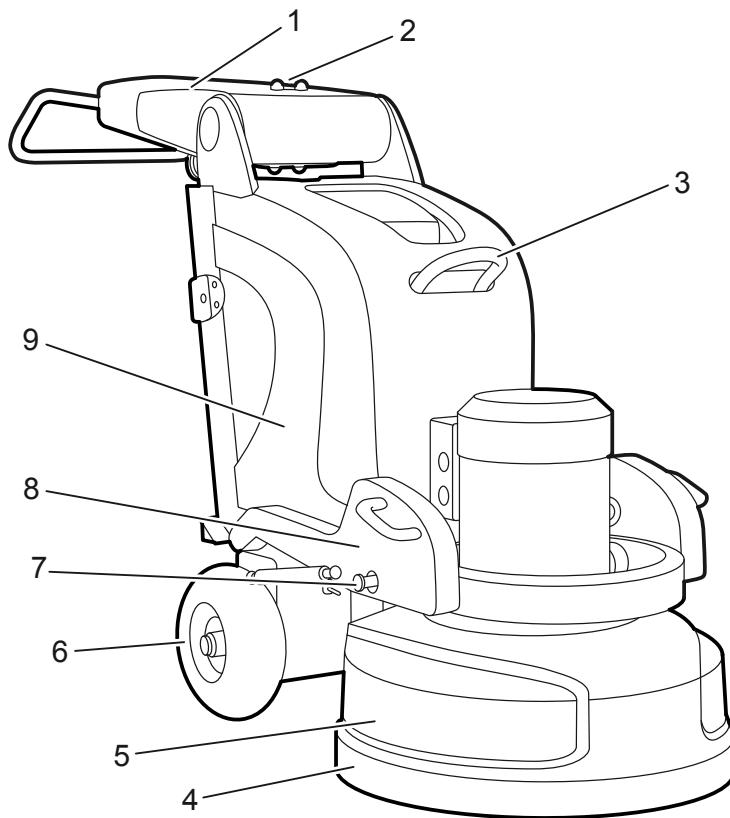


Figure 3-1 The front of the machine

1. Handle
2. Handle lock
3. Lifting eye
4. Splash guard
5. Grinding cover
6. Wheel
7. Locking pin
8. Weight
9. Water tank

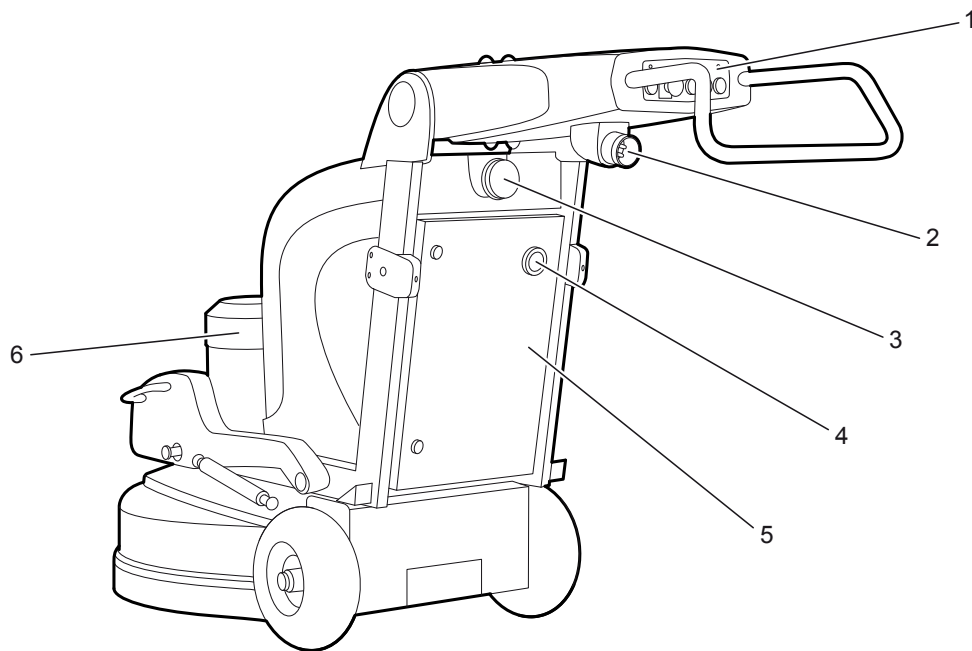


Figure 3-2 The machine's rear

1. Control panel
2. Electrical connection
3. Extraction connection
4. Hour counter
5. Control cabinet
6. Motor

3.2. Description of Controls – Control Panel

The picture below shows the machine's control panel:

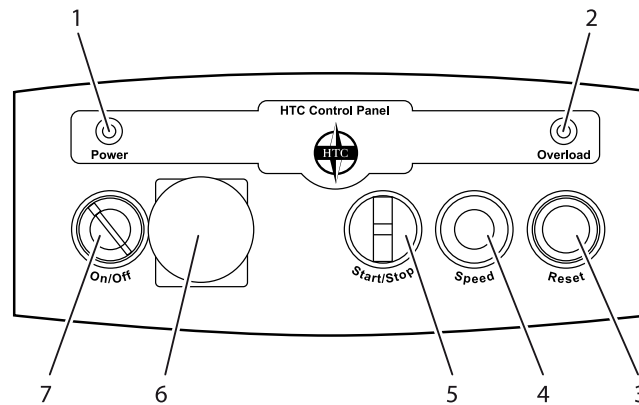


Figure 3-3 Control panel

1. **Power** - Standby indicator: Indicates that the machine's functions have been activated. Shines with a green light when the start key (7) is turned to the right "On".
2. **Overload**- Overload indicator: Lights up to indicate that the machine is using too much power. If this is ignored, the power supply to the motor will be interrupted and an error code generated.
3. **Reset** - Resetting the electronics: If the machine experiences an error, it can be reset by pressing and holding the button in for two seconds. Any error code is shown on the display in the electrical cabinet, see Figure 3-2 on page 11.
4. **Speed**- Rotational speed: Regulates the rotational speed of the machine's grinding discs.
5. **Start/Stop** - Start/stop the grinding discs' rotation. Turn the knob to "Start" to start the rotation, turn the knob to "Stop" to switch off the rotation.
6. **EM-Stop** - Emergency stop switch: In an emergency, press the switch to cut the power to the machine.

7. **On/Off** - Start key to start/stop the machine's functions: Turn the key to "On", to activate the machine's functions and prepare for starting. Turn the knob to "Off" to switch off the machine's functions.

4. Usage

4.1. General Information

The following section describes how to change tools and how to operate the grinding machine. This section does not deal with the technical aspects of grinding, such as selection of grinding tools, etc. For the choice of tools, see HTC's Product Catalogue under the Grinding Guide tab.

**Warning!**

The machine may only be used or repaired by personnel who have received the requisite theoretical and practical training and who have read the user manual.

**Warning!**

Never use the machine in an environment with a risk of explosion or fire. Familiarise yourself with the fire-protection instructions for the working area and follow them.

**Warning!**

Secure the area around the working area. No unauthorised persons should be allowed within a 15-metre radius of the machine. If a loose object were to catch under the grinding head, this could be flung out and cause personal injury.

**Warning!**

Use protective equipment such as safety shoes, safety goggles, protective gloves, breathing mask and ear muffs.

**Warning!**

The machine must only be started with the grinding head down. The rotating disc must be touching the floor and the correct tool must be fitted.



Warning!

*The machine must only be used and moved on level surfaces.
There is a risk of crushing if the machine starts to roll.*



Tip!

Check the minimum recommended cable area before using an extension cord. You will find the recommended cable area under Technical Data on page 36.

4.2. Handle settings

The appropriate working height is set with the help of the adjustable handle. The handle is locked with the handle lock on the handle cover, see Figure 4-1 on page 16.

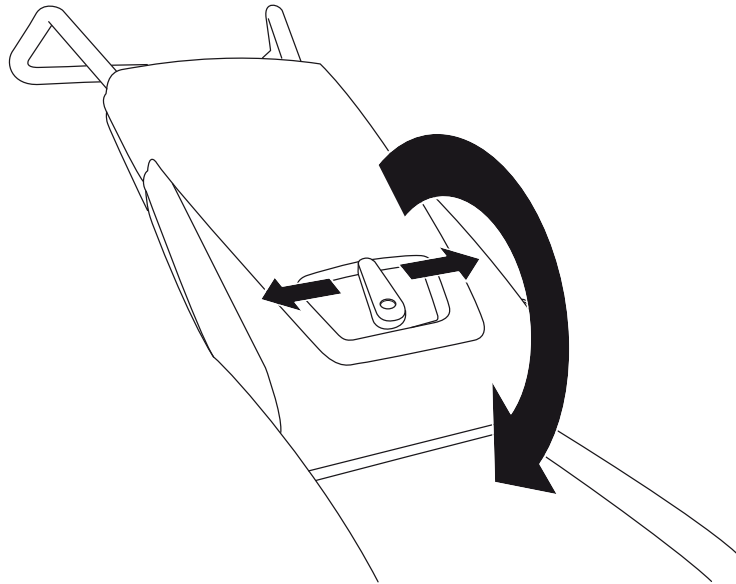


Figure 4-1 Locking the handle

1. Loosen the handle by turning the handle lock to the left or the right.
2. Move the handle to the desired position, the handle locks automatically in the desired position.
3. Make sure that the handle lock returns to the original position to guarantee that the handle is locked properly.

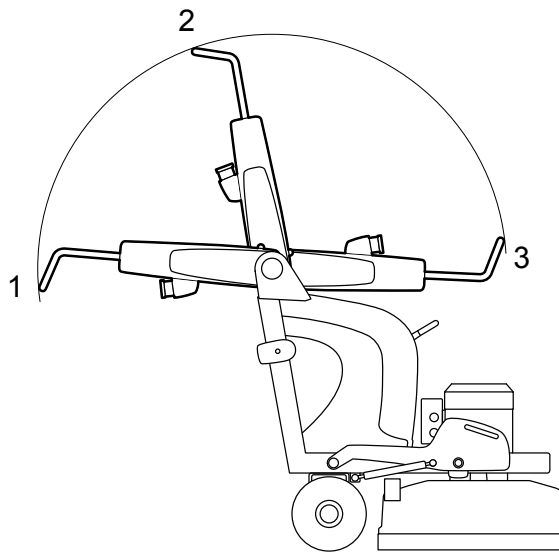


Figure 4-2 Handle settings

1. Working position - used when operating the machine.
2. Rear position - used for tipping the machine, so as to make changing tools easier.
3. The forward position - used, for instance, for transportation, as the machine takes up significantly less space.

4.3. Handling weights

The machine is equipped with two weights to make it easy to move the machine's centre of gravity. Each weight is provided with two locking pins with which the weights can be lowered and locked in three positions; forward, up (normal position) and backwards.

- Pull each pin out and lock in the extracted position by turning in the direction of the arrow, see Figure 4-3 on page 18.



Tip!

We recommend that the weights are folded up during grinding, since if the grinding pressure is too high and the tool is wrong, it can cause damage to the machine and the floor.

**Warning!**

There is a risk of crush injuries when the weights are folded back, since these are not locked in this position.

To obtain a greater grinding pressure, and thereby increased grinding effect, the weights are lowered forwards, see Figure 4-3 on page 18.

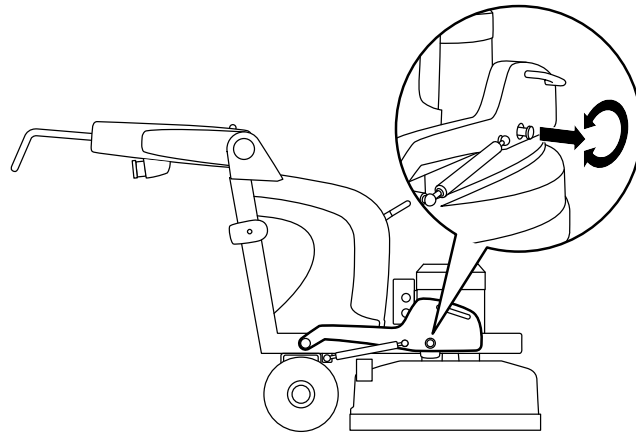


Figure 4-3 Weights lowered forwards

During normal grinding, as well as during transport of the machine, the weights should be placed in the up position, see Figure 4-4 on page 18.

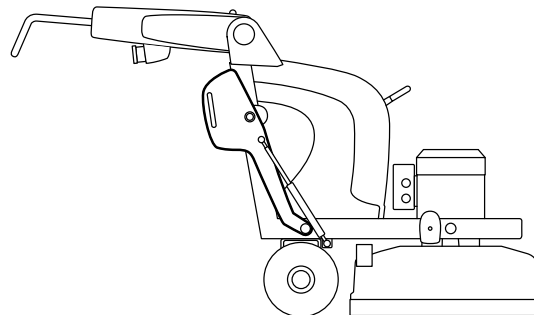


Figure 4-4 Weights in the up position

During the exchange of tools and when tools with a high removal rate (T-Rex™) are used, the weights should be folded back, see Figure 4-5 on page 19.

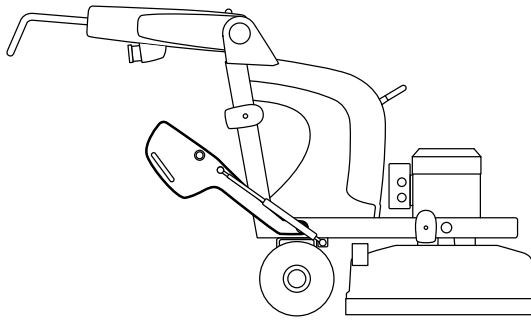


Figure 4-5 Weights folded back

4.4. Access to grinding tools



Warning!

The tool becomes very hot during use. Tip the machine back and allow it to stand for a short while. Use protective gloves when removing the tools.



Warning!

Disconnect the electrical supply when changing tools or repairing the machine.

1. Set the handle to the rear position - see Figure 4-2 on page 17
2. Fold the weights back and place a foot against one of the weights, see Figure 4-6 on page 20.

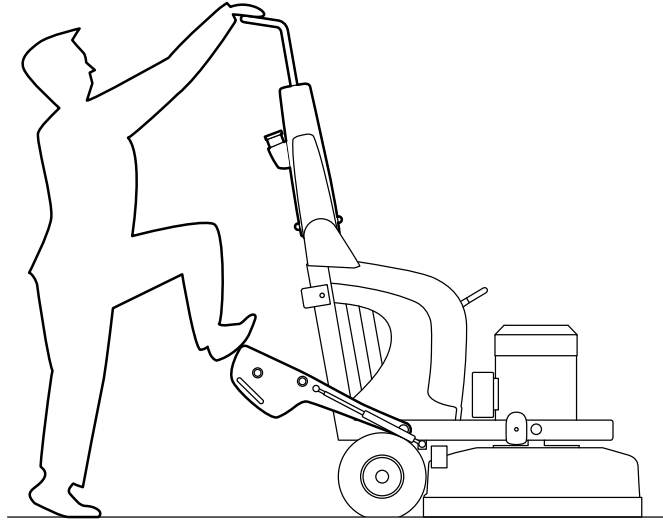


Figure 4-6 Foot on weight

3. Tip the machine backwards carefully, until the weights reach the floor, see Figure 4-7 on page 20.

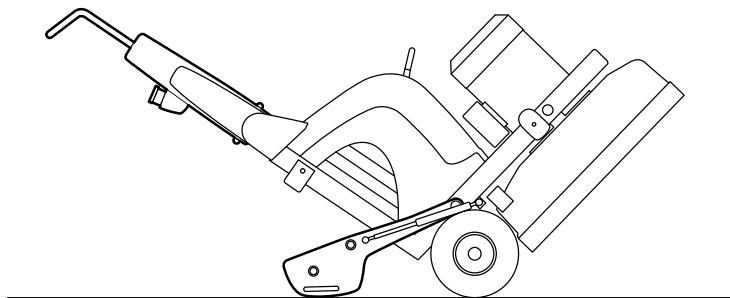


Figure 4-7 Fold back

4. Tip the machine further back, until all of the machine reaches the floor, see Figure 4-8 on page 20.

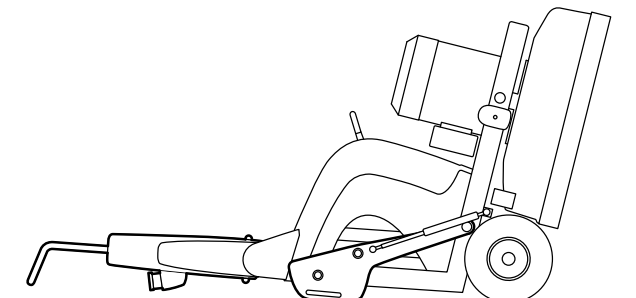


Figure 4-8 Rests on the floor

4.5. Fitting and replacing grinding tools



Warning!

Disconnect the electrical supply, when changing tools or repairing the machine.



Warning!

The tool becomes very hot during use. Tip the machine back and allow it to stand for a short while. Use protective gloves when removing the tools.

As the machine is equipped with the patented EZchange tool system, fitting and replacing grinding tools is quick and easy. The tool system consists of wings on which diamond grinding tools are fitted without the need for screws.

4.5.1. Fitting grinding tools

1. Slide the grinding tool diagonally, from above, down into the appropriate guide slot on the tool holder, see Figure 4-9 on page 21. Then push the tool fully into the guide slot.

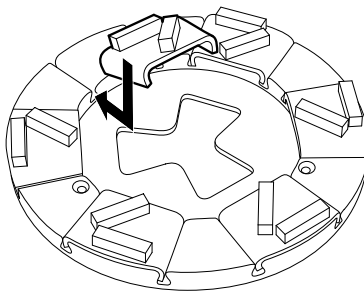


Figure 4-9 Fitting grinding tools

2. Lock the grinding tool into the tool holder by giving it a few light taps with a rubber hammer - see Figure 4-10 on page 22.

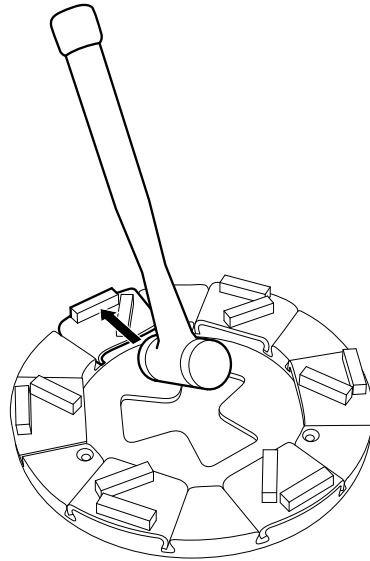


Figure 4-10 Locking grinding tools

4.5.2. Changing grinding tools

1. Remove the grinding tool by giving it a few light taps with a rubber hammer so the locking mechanism releases, see Figure 4-11 on page 22. Then draw the tool up out of the guide slot.

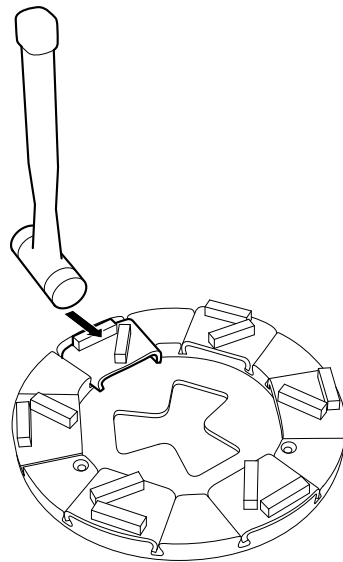


Figure 4-11 Removing grinding tools

2. Slide the grinding tool diagonally, from above, down into the appropriate guide slot on the tool holder, see Figure 4-9 on page 21. Then push the tool fully into the guide slot.

3. Lock the grinding tool into the tool holder by giving it a few light taps with a rubber hammer - see Figure 4-10 on page 22.

4.6. Preparations for dry grinding



Warning!

Check that the splash guard is fitted.

1. Connect a dust extractor to the machine. For dust extractor models, see under the Suction System tab in the HTC Product Catalogue.



Note!

The dust extractor's suction hose must be connected to the appropriate socket on the machine. Adjust the dust extractor to match the grinder's capacity.

2. Inspect the floor carefully and remove any objects sticking up, such as reinforcement rods or bolts, and any debris that could get caught in the machine.
3. Attach the appropriate tool to the machine, see under Fitting grinding tools on page 21.
4. Set the handle to the working position, see Figure 4-2 on page 17.

4.7. Preparations for wet grinding



Warning!

Check that the splash guard is fitted.

1. Always use wet suction when wet grinding.



Tip!

Never use a dust extractor, as blockages may develop in the dust extractor's suction hose and filter.

2. Inspect the floor carefully and remove any protruding objects, such as reinforcement rods or bolts, and any debris that could otherwise get caught in the machine.
3. Attach the appropriate tool to the machine.
4. Set the handle to the working position, see Figure 4-2 on page 17.

**Warning!**

Only use cold water with no chemical additives.

5. Fill the tank with cold water.
6. Turn the tap on the left side of the machine to the open position.
7. Turn the tap to the closed position once wet grinding is finished.

4.8. Operation

The machine's functions can be controlled using the control panel - see Figure 3-3 on page 12.

During operation, the operator pushes the grinder forward over the floor surface.

4.8.1. Standby

To activate the machine's functions, turn the key to the right. When the key is in this position, the green Power light on the control panel is lit, indicating that the machine is in standby mode.

4.8.2. Emergency stop switch

The emergency stop switch, (EM-Stop) must only be used in an emergency.

When the switch is pressed, all the electrically-powered equipment on the machine is turned off.

**Note!**

Do not use the emergency stop switch to stop the machine ,other than in emergencies, as it causes wear to the switch.

**Note!**

As long as the emergency stop switch (EM-Stop) is pressed in, the machine cannot be started. Reset by turning the switch 45°, so it pops out again. The machine can then be restarted.

4.8.3. Starting the machine

For a description of the control panel, see Figure 3-3 on page 12.

1. Make sure the emergency stop switch is not activated.
2. Insert the cable.
3. Start the dust separator, if dry grinding is to be done.
4. Turn the key to the right "On".
5. Start the grinding discs rotating, by turning the knob to "Start".
6. Set the speed for the grinding discs, using the Speed knob.
7. The machine has now started.

4.8.4. Overload

If the machine is using too much power, the Overload indicator on the control panel goes lights. The machine switches off automatically after a while, if this is ignored. Reduce the speed of the grinding discs, to see if the Overload indicator goes out. If this does not help, follow the procedure for troubleshooting.

**Tip!**

If the machine is heavy to operate, it can be due to the placing of the weights. Fold the weights up or back, to unload the grinding head, see Figure 4-4 on page 18 and Figure 4-5 on page 19.

4.9. Making operation easier

In order to keep the suction hose for the dust extractor and the power cable out of the working area and/or path of the machine, the hose and cable can be arranged as shown in the picture below.

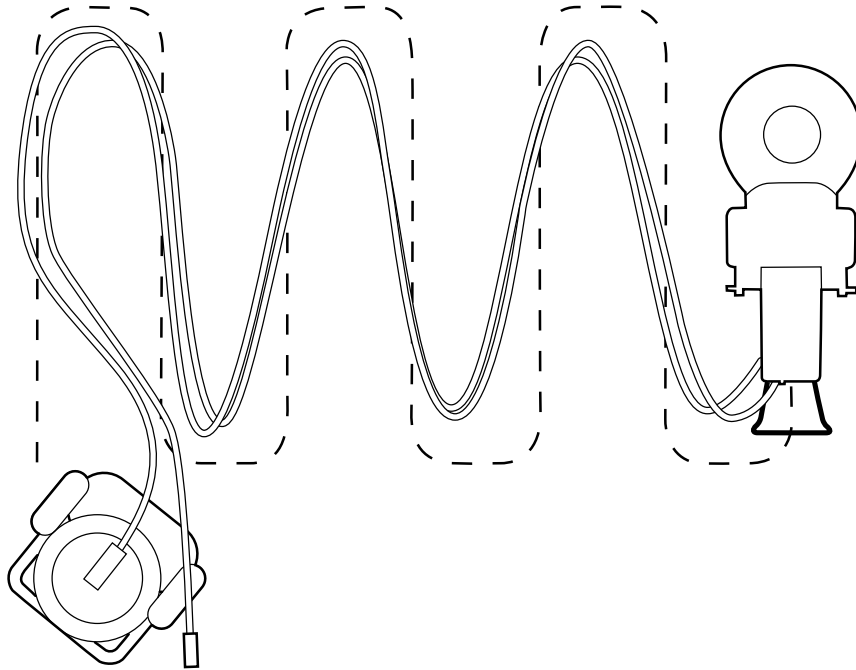


Figure 4-12 Making operation easier



Tip!

By arranging the hose and cable as shown in the picture, you avoid disruptive stoppages caused by having to re-position the cable and hose.

5. Maintenance and repairs

5.1. General Information

We recommend regular inspections of all seals.



Warning!

Disconnect the electrical supply, when changing tools or repairing the machine.



Warning!

Use protective equipment such as shoes with steel toecaps, safety goggles, protective gloves, protective mask and ear protectors.

5.2. Cleaning



Warning!

Do not clean the machine using a high-pressure washer. Otherwise moisture may penetrate electrical elements and damage the machine's drive system.

- Vacuum the electrical cabinet, if required.
- Always clean the machine after use with a damp sponge or cloth.

5.3. Daily

- Wash the machine, if it is used for wet grinding or with the Mist Cooler system.
- Check for wear to the grinding tool – abnormal or uneven wear may indicate a damaged grinding holder.
- Check the tool holder and grinding holder to ensure that no damage or cracks have arisen. Replace the parts if there is any damage.

5.4. Every week

- Wash the machine.

- Check the grinding holders. Remove the tools and run the machine in mid air at the slowest speed. If the grinding holders oscillate or wobble significantly, they are damaged.
- Check that the upper belt is whole, by turning the large disc in one direction or the other. If there is resistance the belt is whole, if the disc rotates freely the belt is broken.

**Tip!**

Recondition all the grinding holders at the same time.

5.5. Every month (or 100 hours)

- Tighten anything that may have vibrated loose.
- Remove the grinding cover and check that it is undamaged.
- Check the upper belt and replace if necessary.
- Check the seals on the shafts on which the upper belt runs and replace if necessary.
- Scrape and vacuum-clean the parts shielded by the grinding cover.
- Test run and listen for any dissonance from the bearings.
- Clean or, if necessary, replace the filter to the electrical cabinet.

5.6. Repairs

Any repairs that may be required must be carried out by a HTC Service Centre, which has trained service personnel and uses HTC original parts and accessories. Contact your retailer if your machine requires servicing. For contact information, see Contact Information at the start of the manual.

5.7. Spare parts

To ensure rapid delivery of spare parts, always specify the model, the machine's serial number and the spare part number when ordering. Information on the model and serial number can be found on the machine's name plate.

Information on spare part numbers can be found in the machine's spare parts list which is available to read or print out from the accompanying digital media or HTC's website:

www.htc-floorsystems.com

Only original tools and spare parts from HTC may be used.
Otherwise neither the CE marking nor the warranty will be valid.

6. Faultfinding

6.1. General Information

This chapter describes some of the faults that may occur and how to deal with them. If the fault cannot be dealt with, or if there are other faults, contact your nearest retailer. See Contact Information at the front of the manual.

6.1.1. The machine will not start

- Check if the emergency stop switch on the control panel is pressed. Reset the switch by turning it 45°.
- Check if the power connection is correct. Check that there is full voltage available on the supply's phase/phases.
- Check the fuses and contactors in the electrical cabinet.
- Check the error code on the frequency converter's display. For corrective measures, see chapter Electronic error codes on page 32.

6.1.2. The machine vibrates or wears the tool unevenly

- Check that there is movement between the chassis and grinding head. If necessary, loosen one of the two pins in order to increase the play between the chassis and the grinding head.
- Check the belts, replace if necessary.
- Check the condition of the grinding holders. If the grinder holders need reconditioning, contact HTC for information about spare parts.

6.1.3. The machine is grinding at an angle

- Recondition the grinding holder. See under The machine vibrates or wears the tool unevenly on page 30.
- Check that the upper belt is undamaged. Try to turn the large disc in one direction or the other, there should be resistance. If it turns freely, the belt is broken and must be replaced.

6.1.4. The machine stops during operation

- Check the error code in the display on the frequency converter, see Electronic error codes on page 32.

6.1.5. The fuses trip frequently

- The load is too high on the distribution box to which the machine is connected. Use a different socket or reduce the speed of the machine.
- Check the tools. Ensure that the correct tools are used, that they are in working order and that they are correctly fitted.

6.1.6. The machine cannot cope

- Heavy load. Press the handle down slightly so that the grinding head eases away slightly from the surface being ground.
- Sticky coating on the surface being ground. Run half of the machine on the surface to be cleaned and half on the clean surface. This removes any residue from the tools.
- Check the tools. Ensure that the correct tools are used, that they are in working order and that they are correctly fitted.
- Voltage drop. Check that the cable area meets HTC's recommendations.

**Tip!**

Check the minimum recommended cable area before using an extension cord. You will find the recommended cable area under Technical Data on page 36.

7. Electronic error codes

7.1. General

In the event of an error, the error code is shown in the display. The most common error codes that may occur on the frequency converter, in the control cabinet, are listed below. In the event of other errors, contact the HTC Service Centre.

7.2. Hitachi SJ700

Error code	Cause	Action
E01	Excess current at constant speed	The machine is running too fast or with too great a load. Lower the speed, lower the load by changing the position of the weights and check your tools. Check mechanical inertia, spin the grinding discs.
E02	Excess current during deceleration	See E01
E03	Excess current during acceleration	See E01
E04	Excess current under other conditions	See E01
E05	Overload	See E01
E08	Internal EEPROM error due to overheating or interference	Open the electrical cabinet and allow to cool. Check the filter and the cooling fans in the cabinet. Let the frequency converter cool down before restarting.
E09	Under-voltage	The connection cable is too long, poor connection or too many consumers connected to the mains. Change socket, use shorter cables and lower the speed.
E10	Internal current supply error	Contact HTC Service Centre.
E11	Internal processor fault	Reset the electronics using the Reset procedure.
E13	Anti-restart switch tripped	Check the operation when starting the machine, see Operation on page 24.
E14	Earth fault	Check the motor's cables and connections.
E15	Excess voltage	Mains voltage too high or disturbance in the mains supply. Check the supply voltage, change socket.

Error code	Cause	Action
E21	Excess temperature	See E08.
E22	Internal processor error	Contact HTC Service Centre.
E30	Internal communications error	Contact HTC Service Centre.

7.2.1. Resetting the frequency converter

- Press and hold the "RESET" button in for two seconds.

7.2.2. Checking the last error code

1. Press FUNC, D01 is shown in the display.
 2. Press "arrow up", until D08 is shown in the display.
 3. Press FUNC, the error code is shown in the display.
 4. Press FUNC again, the current frequency is shown in the display.
 5. Press FUNC once again, the motor voltage is shown in the display.
 6. Press FUNC once again, the voltage of the DC bus is shown in the display.
- Press "arrow up", until D09 is shown in the display, in order to see the previous error codes.

7.3. Omron MX2

Error code	Cause	Action
E01	Excess current at constant speed	The machine is running too fast or with too great a load. Lower the speed, lower the load by changing the position of the weights and check your tools. Check mechanical inertia, spin the grinding discs.
E02	Excess current during deceleration	See E01
E03	Excess current during acceleration	See E01
E04	Excess current under other conditions	See E01
E05	Overload	See E01
E08	Internal EEPROM error due to overheating or interference	Open the electrical cabinet and allow to cool. Check the filter and the cooling fans in the cabinet. Let the frequency converter cool down before restarting.

Error code	Cause	Action
E09	Under-voltage	The connection cable is too long, poor connection or too many consumers connected to the mains. Change socket, use shorter cables and lower the speed.
E10	Internal current supply error	Contact HTC Service Centre.
E11	Internal processor fault	Reset the electronics using the Reset procedure.
E13	Anti-restart switch tripped	Check the operation when starting the machine, see Operation on page 24.
E14	Earth fault	Check the motor's cables and connections.
E15	Excess voltage	Mains voltage too high or disturbance in the mains supply. Check the supply voltage, change socket.
E21	Excess temperature	See E08.
E22	Internal processor error	Contact HTC Service Centre.
E30	Internal communications error	Contact HTC Service Centre.

7.3.1. Resetting the frequency converter

- Press and hold the "RESET" button in for two seconds.

7.3.2. Checking the last error code

For the "Set key" button, see Figure 7-1 on page 35.

1. Press the "Set key" button; D001 is shown in the display.
2. Press the "arrow up" button until D081 is shown in the display.
3. Press the "Set key" button; the error code is shown in the display.
4. Press the "arrow up" button; the frequency at the time of the error is shown in the display.
5. Press the "arrow up" button; the motor current during the error is shown in the display.
6. Press the "arrow up" button; the voltage of the DC bus during the error is shown in the display.

7. Press the "arrow up" button; the operating time accumulated at the time of the error is shown in the display.
8. Press the "arrow up" button, the time accumulated with the voltage on at the time of the error is shown in the display.



Figure 7-1 Button "Set key"

8. Technical Data

The table below presents the technical data for the machine.

	HTC 650 HDX EU	HTC 650 HDX EU Mist	HTC 650 HDX US	HTC 650 HDX US Mist
Motor	11 kW	11 kW	11 kW	11 kW
Current	22 A	22 A	22 A	22 A
Voltage	3 x 380-415 V	3 x 380-415 V	3 x 440-480 V	3 x 440-480 V
Total machine weight	400 kg	403 kg	400 kg	403 kg
Chassis weight	188 kg	191 kg	188 kg	191 kg
Weight, grinding head	212 kg	212 kg	212 kg	212 kg
Weights	2 x 32 kg	2 x 32 kg	2 x 32 kg	2 x 32 kg
Grinding diameter	680 mm	680 mm	680 mm	680 mm
Grinding pressure, weights lowered forwards	252 kg	252 kg	252 kg	252 kg
Grinding pressure, weights in the up position	179 kg	179 kg	179 kg	179 kg
Grinding pressure, weights folded backwards	162 kg	162 kg	162 kg	162 kg
Rotational speed	373 - 1679 r.p.m.	373 - 1679 r.p.m.	373 - 1679 r.p.m.	373 - 1679 r.p.m.
Water tank	19 litres	19 litres	19 litres	19 litres
Grinding discs	4 x 230 mm	4 x 230 mm	4 x 230 mm	4 x 230 mm
Recommended minimum cable area	6 mm ²	6 mm ²	6 mm ²	6 mm ²
Sound pressure level, average value over time according to ISO 3741, measurement uncertainty according to class 1 measuring instruments for sound level meters.	96 dBA	96 dBA	96 dBA	96 dBA

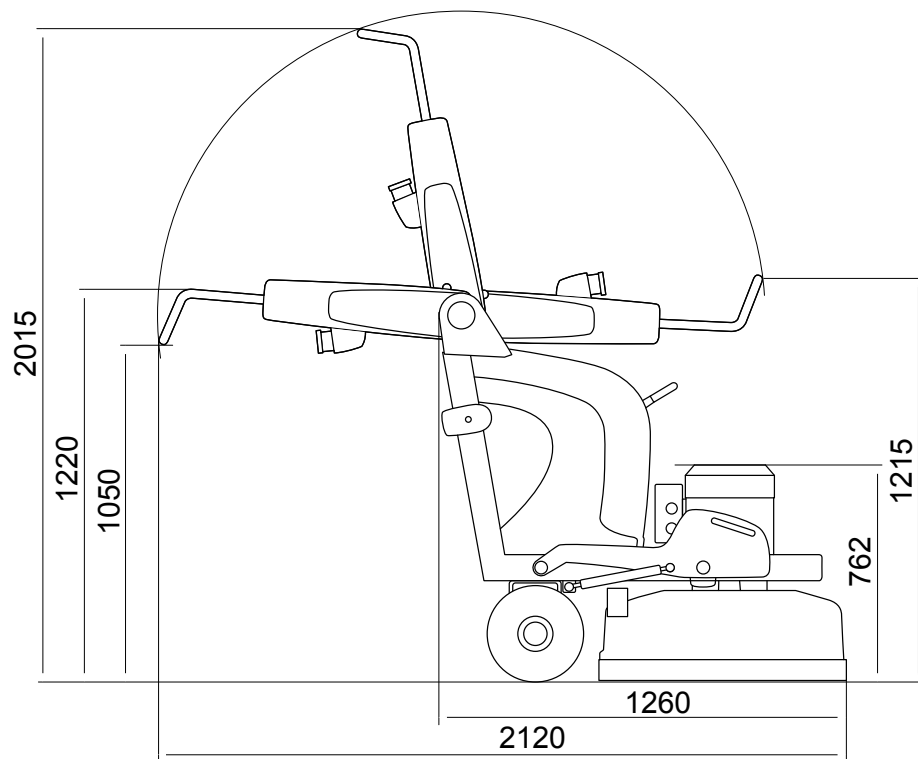


Figure 8-1 Height and length of the machine in millimetres

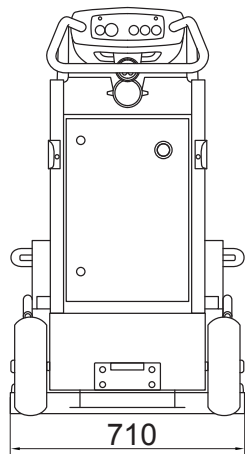


Figure 8-2 Width of the machine in millimetres

9. Environment

HTC's products consist largely of recyclable metals and plastic. The main materials used are listed below.

Chassis	
Frame	Electro-galvanised steel
Handle	Plastic covered steel
Wheels	Polyurethane-filled rubber wheels
Cover	ABS plastic
Motor	Aluminium

Grinding head	
Lower cover	Aluminium
Cover	ABS plastic
External plate and steel components	Electro-galvanised steel
Other components	Steel

Electrical system	
Power unit	Stainless steel
Cables	Copper conductors with PVC casing

Plastic components can be recycled by sorting under hard plastics. Electronics can be submitted as electronic waste. The dust extractor or its components can, of course, also be returned to HTC Sweden AB.

10. Warranty and CE Marking

10.1. Warranty

This warranty only covers manufacturing defects. HTC bears no responsibility for damage that arises or occurs during transportation, unpacking or use. In no case and under no circumstances shall the manufacturer be held responsible for damage and defects caused by incorrect use, corrosion or use over and above the prescribed specifications. The manufacturer is not responsible for indirect damage or costs under any circumstances. The manufacturer's warranty period is 24 months from commissioning, although no longer than 30 months from delivery from the factory. (General delivery terms NL92.)

Local distributors may have special warranty conditions specified in their terms of sale, delivery and warranty. If you are unsure regarding warranty terms, please contact your retailer.

10.2. CE marking

CE marking of a product guarantees its free movement within the EU area in accordance with EU regulations. CE marking also guarantees that the product fulfils various directives (the EMC Directive and other possible requirements in so-called directives for new procedures) in accordance with these regulations. This machine carries the CE mark in accordance with the Low Voltage Directive (LVD), the Machinery Directive and the EMC Directive. The EMC Directive states that electronic equipment must not disturb its surroundings with electromagnetic radiation and that it must also be immune to electromagnetic interference in the surroundings.

This machine is classified for use in environments such as heavy industry, light industry and homes. See the Manufacturer's Declaration of Conformity, which shows that the machine is harmonised with the EMC Directive.

